



INSTRUCTIONS FOR MOUNTING YOUR TRAILER ON REESE STABILIZERS

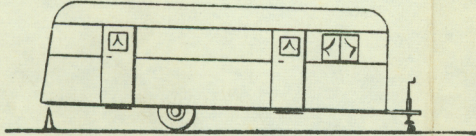

Using the coupler-jack at the front end of the trailer, lower the front end 2 to 4 inches below level and place 2 stabilizers under the rear end of the frame. Adjust the screw by hand, snug up against the frame. If the trailer is setting high on one side, adjust the screw on that side correspondingly low.

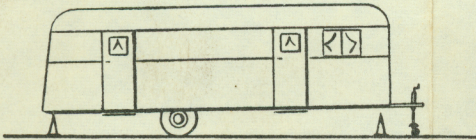

Next raise the front end of the trailer slightly above level, using the coupler-jack, and place the other 2 stabilizers under the front end of the frame, adjusting the screws as before. Lower the front end of the trailer onto the front stabilizers.

We hope you enjoy your trailer mounted solidly on REESE STABILIZERS as we did in almost a year of testing them.

NOTE! It is neither necessary nor advisable to lift the trailer off its wheels.

REESE PRODUCTS, Inc.
ELKHART, INDIANA